

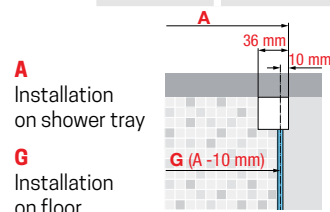


KUADRA 2.0 PH+FH

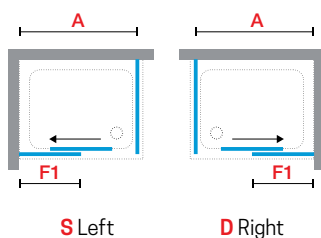

CORNER SOLUTION, 1 SLIDING DOOR + 1 FIXED PANEL IN LINE AND 1 SIDE PANEL

Dimensions				Code	Right	Left	Glass	Profile	
Shower tray Size	Actual size	Fixed panels	Access		D-	S-	1	K	H
	A	F1	*				Clear	Chrome	Matt Black
DOOR									
110	107↔109	52	45	K2PH107	D-	S-	●		
-	109↔111	54	45	K2PH109	D-	S-			
120	117↔119	57	50	K2PH117	D-	S-	●		
-	119↔121	59	50	K2PH119	D-	S-			
130	127↔129	62	55	K2PH127	D-	S-	●		
-	129↔131	64	55	K2PH129	D-	S-			
140	137↔139	67	60	K2PH137	D-	S-	●		
-	139↔141	69	60	K2PH139	D-	S-			
150	147↔149	72	65	K2PH147	D-	S-	●		
-	149↔151	74	65	K2PH149	D-	S-			
160	157↔159	77	70	K2PH157	D-	S-	●		
-	159↔161	79	70	K2PH159	D-	S-			
170	167↔169	82	75	K2PH167	D-	S-	●		
-	169↔171	84	75	K2PH169	D-	S-			
180	177↔179	87	80	K2PH177	D-	S-	●		
-	179↔181	89	80	K2PH179	D-	S-			
SIDE PANEL REVERSIBLE									
	F								
70	67↔69	-	-	K2FH67-	-	-	●		
-	69↔71	-	-	K2FH69-	-	-			
-	71↔73	-	-	K2FH71-	-	-			
76	72↔74	-	-	K2FH72-	-	-	●		
76	74↔76	-	-	K2FH74-	-	-			
-	76↔78	-	-	K2FH76-	-	-			
80	77↔79	-	-	K2FH77-	-	-	●		
-	79↔81	-	-	K2FH79-	-	-			
-	81↔83	-	-	K2FH81-	-	-			
-	85↔87	-	-	K2FH85-	-	-			
90	87↔89	-	-	K2FH87-	-	-	●		
-	89↔91	-	-	K2FH89-	-	-			
-	91↔93	-	-	K2FH91-	-	-			
-	95↔97	-	-	K2FH95-	-	-			
100	97↔99	-	-	K2FH97-	-	-	●		
-	99↔101	-	-	K2FH99-	-	-			
-	101↔103	-	-	K2FH101-	-	-			
-	105↔107	-	-	K2FH105-	-	-			
110	107↔109	-	-	K2FH107-	-	-			
-	109↔111	-	-	K2FH109-	-	-			
-	111↔113	-	-	K2FH111-	-	-			
-	115↔117	-	-	K2FH115-	-	-			
120	117↔119	-	-	K2FH117-	-	-			
-	119↔121	-	-	K2FH119-	-	-			
-	121↔123	-	-	K2FH121-	-	-			

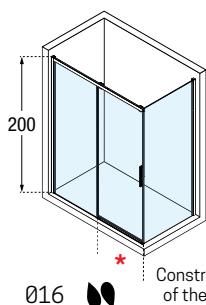

A Installation on shower tray

G Installation on floor

● **IN STOCK UK**

(Other products) please check availability

Ø16

Construction of the Code:

Code + Right / Left + Glass + Profile = Final product Code



GLASS TYPE



Clear
code 1

PROFILE COLOURS



Chrome
code K

Matt Black
code H

TECHNICAL DATA

PROFILE COLOURS



Chrome
code K



Matt Black
code H


GLASS TYPE 6 mm (European Standards UNI EN 14428)



Clear
cod. 1




OVERALL DIMENSIONS FIXING PROFILES

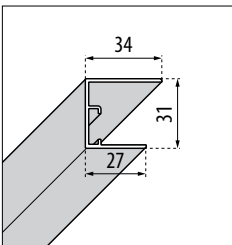


STANDARD PROFILE

Altezza	Finitura	Codice
200	Nero	P01BWMOST-H
	Cromo	P01BWMOST-K

HOW TO TAKE THE MEASUREMENTS

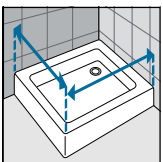

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

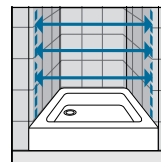

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.