

# OPERA A



200 cm



8 mm






2 cm



## CORNER ENTRY ENCLOSURE, 2 SLIDING DOORS + 2 FIXED PANELS

Dimensions				Code	Right	Left	Glass		Profile			
Actual size	Glass centered	Fixed panels	Access		D-	S-	1	51	U	B	K	H
A	G	F1	*				Clear	Ravenna print	Matt White	Silver	Chrome	Matt Black
67↔69	65,9↔67,9	33,5	32	<b>OPEA67L</b>	D-	S-						
69↔71	67,9↔69,9	34,5	34	<b>OPEA69L</b>	D-	S-						
75↔77	73,9↔75,9	37,5	38	<b>OPEA75L</b>	D-	S-						
77↔79	75,9↔77,9	38,5	39	<b>OPEA77L</b>	D-	S-						
79↔81	77,9↔79,9	39,5	41	<b>OPEA79L</b>	D-	S-						
85↔87	83,9↔85,9	42,5	45	<b>OPEA85L</b>	D-	S-						
87↔89	85,9↔87,9	43,5	46	<b>OPEA87L</b>	D-	S-						
89↔91	87,9↔89,9	44,5	48	<b>OPEA89L</b>	D-	S-						
95↔97	93,9↔95,9	47,5	52	<b>OPEA95L</b>	D-	S-						
97↔99	95,9↔97,9	48,5	53	<b>OPEA97L</b>	D-	S-						
99↔101	97,9↔99,9	49,5	55	<b>OPEA99L</b>	D-	S-						
115↔117	113,9↔115,9	65,5	58	<b>OPEA115L</b>	D-	S-						
117↔119	115,9↔117,9	66,5	60	<b>OPEA117L</b>	D-	S-						
119↔121	117,9↔119,9	67,5	62	<b>OPEA119L</b>	D-	S-						

TO COMPLETE A CORNER ENTRY, ORDER 2 SIDES (1 RIGHT + 1 LEFT)

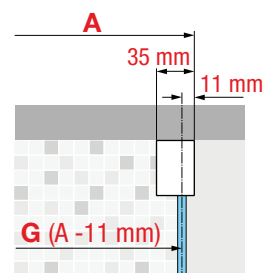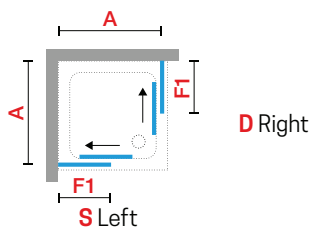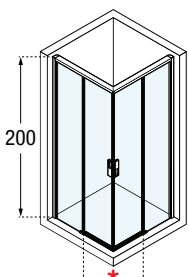

**A** Installation on shower tray  
**G** Installation on floor


096 Construction of the Code: **Code** + **Left / Right** + **Glass** + **Profile** = Final product Code



#### GLASS TYPE



Clear  
code 1

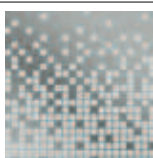

Ravenna Print.  
code 51

#### PROFILE COLOURS




Matt White  
code U



Silver  
code B



Chrome  
code K

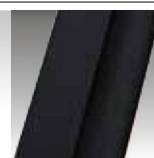

Matt Black  
code H

# TECHNICAL DATA

## PROFILE COLOURS



Matt White  
code U



Silver  
code B




Chrome  
code K 




Matt Black  
code H

## GLASS TYPE 8 mm (European Standards UNI EN 14428)

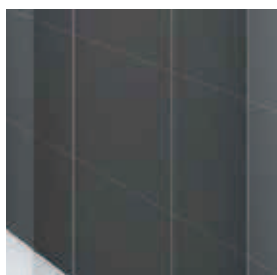

Clear  
cod. 1 

## PRINTING

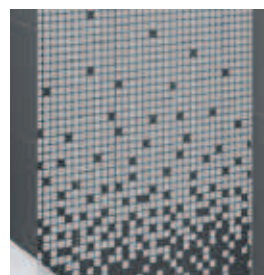


Ravenna  
cod. 51

## HANDLES




Metal handle white,  
black or chrome

## OVERALL DIMENSIONS FIXING PROFILES

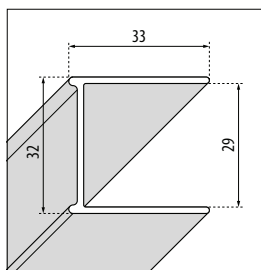

**WALL**  
for Opera PH - 2P - A - 2PH


Height	Profile	Code
1999	White	<b>P01BXMOST-U</b>
	Silver	<b>P01BXMOST-B</b>
	Chrome	<b>P01BXMOST-K</b>
	Black	<b>P01BXMOST-H</b>

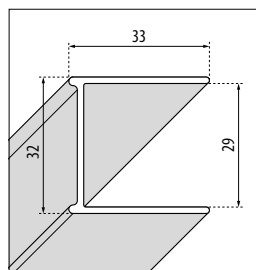


**WALL**  
for Opera FH

Height	Profile	Code
2002	White	<b>P01BXFHST-U</b>
	Silver	<b>P01BXFHST-B</b>
	Chrome	<b>P01BXFHST-K</b>
	Black	<b>P01BXMOST-H</b>

## HOW TO TAKE THE MEASUREMENTS

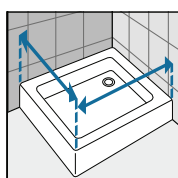

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

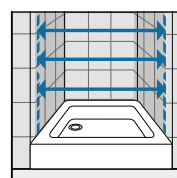

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.